

Continental KEYBOARD

Ver.2.0

Voice Name List

Table of Contents

VARIATION	. 2
ORGAN	
CX-3	
VOX	
COMPACT	
E.PIANO	
TINE	
REED	
FM	
PIANO	
GRAND	3
UPRIGHT	
E. GRAND	3
KEY/LAYER	
KEY	3
BRASS	3
STRINGS	3
LEAD	4
SYNTH	4
OTHER	4
SCENE	
SCENE	. 5
EFFECTS controls	
EFFECT	
DELAY	
REVERB	. 5
Domo songs	

VARIATION

ORGAN

CX-3

No.	Name	Bend lever	ASSIGN1	ASSIGN2
01	8/8/8 Drawbars C3	Rotary Slow/Fast		
02	8/8/8/8 Drawbars	Rotary Slow/Fast		
03	Rock Organ 1	Rotary Slow/Fast		
04	Rock Organ 2	Rotary Slow/Fast		
05	Rock Organ 3	Rotary Slow/Fast		
06	Rock Organ 4	Rotary Slow/Fast		
07	Full Organ 1	Rotary Slow/Fast		
08	Full Organ 2	Rotary Slow/Fast		
09	Distortion Organ	Rotary Slow/Fast		
10	R&B Organ 1	Rotary Slow/Fast		
11	R&B Organ 2	Rotary Slow/Fast		
12	Jazz Organ 1	Rotary Slow/Fast		
13	Jazz Organ 2	Rotary Slow/Fast		
14	Jazz Organ 3	Rotary Slow/Fast		
15	Jazz Organ 4	Rotary Slow/Fast		
16	Gospel Organ	Rotary Slow/Fast		
17	Blues Organ	Rotary Slow/Fast		
18	Funk Organ	Rotary Slow/Fast		
19	Quiet Hymn	Rotary Slow/Fast		

VOX

No.	Name	Bend lever	ASSIGN1	ASSIGN2
01	VOX Organ Basic	Rotary Slow/Fast		
02	VOX Organ Full	Rotary Slow/Fast		
03	VOX Organ Vibrato	Rotary Slow/Fast		
04	A Message to You Organ	Rotary Slow/Fast		
05	Mess Around Organ	Rotary Slow/Fast		
06	I'm Down Organ	Rotary Slow/Fast		
07	Light My Fire Organ	Rotary Slow/Fast		
08	Soul Kitchen Organ	Rotary Slow/Fast		
09	Pump It Up Organ	Rotary Slow/Fast		
10	Radio Radio Organ 1	Rotary Slow/Fast		
11	Radio Radio Organ 2	Rotary Slow/Fast		

COMPACT

No.	Name	Bend lever	ASSIGN1	ASSIGN2
01	Compact Organ Basic	Rotary Slow/Fast		
02	Compact Organ Full	Rotary Slow/Fast		
03	Compact Organ Vibrato	Rotary Slow/Fast		
04	Arnold Layne Organ	Rotary Slow/Fast		
05	Wooly Bully Organ	Rotary Slow/Fast		
06	Mission Impossible Organ	Rotary Slow/Fast		
07	Incense and Pepp Organ	Rotary Slow/Fast		
08	Rock Lobster Organ	Rotary Slow/Fast		
09	Jerk It Out Organ	Rotary Slow/Fast		
10	X Offender Organ	Rotary Slow/Fast		
11	11:59 Organ	Rotary Slow/Fast		

E.PIANO

TINE

No.	Name	Bend lever	ASSIGN1	ASSIGN2
1	E.Piano MK I	Tremolo ON/OFF		-
2	E.Piano MK I Amp	Tremolo ON/OFF		-
3	E.Piano MK I Tremolo	Tremolo ON/OFF		-
4	E.Piano MK I Bell Tremolo	Tremolo ON/OFF		
5	E.Piano MK I Phaser	Tremolo ON/OFF		
6	E.Piano MK II Amp	Tremolo ON/OFF		
7	E.Piano MK II Tremolo	Tremolo ON/OFF		
8	E.Piano MK V	Tremolo ON/OFF		
9	E.Piano Dyno Chorus	Tremolo ON/OFF		

REED

No.	Name	Bend lever	ASSIGN1	ASSIGN2
1	Reed EP 200	Tremolo ON/OFF		
2	Reed EP 200 Tremolo	Tremolo ON/OFF		
3	Reed EP 200 Amp	Tremolo ON/OFF		
4	Reed EP 200A Tremolo	Tremolo ON/OFF		
5	Reed EP 200A Chorus	Tremolo ON/OFF		
6	Reed EP 200A Drive	Tremolo ON/OFF		
7	Reed EP 200 Comp	Tremolo ON/OFF		
8	Reed EP 200A	Tremolo ON/OFF		
9	Reed EP 200A Phaser	Tremolo ON/OFF		

FΜ

No.	Name	Bend lever	ASSIGN1	ASSIGN2
1	FM E.Piano 1	Tremolo ON/OFF		
2	FM E.Piano 2	Tremolo ON/OFF		-
3	Dark FM E.Piano	Tremolo ON/OFF		
4	FM E.Piano Bell	Tremolo ON/OFF		
5	E.Piano Pad	Tremolo ON/OFF		-
6	Piano Pad	Tremolo ON/OFF		
7	Wired Piano	Tremolo ON/OFF		
8	FM E.Piano 3	Tremolo ON/OFF		
9	Analog Piano	Tremolo ON/OFF		

PIANO

GRAND

No.	Name	Bend lever	ASSIGN1	ASSIGN2
1	Grand Piano 1	Lid Position		
2	Grand Piano 2	Lid Position	-	-
3	Dark Grand Piano	Lid Position	-	
4	Bright Grand Piano	Lid Position		
5	Grand Piano Mono	Lid Position	-	-
6	Rock Octave Piano	Octave Layer	-	
7	Soft Ballad Piano	Lid Position	-	-
8	Very Old Piano	Sound Character		
9	Delay Piano	Effect Depth		

UPRIGHT

No.	Name	Bend lever	ASSIGN1	ASSIGN2
1	Upright Piano 1	Lid Position	-	-
2	Upright Piano 2	Auto Pan	-	
3	Upright Piano Mono 1	Lid Position	-	-
4	Upright Piano Mono 2	Lid Position	-	
5	Old Upright Piano	Auto Pan		
6	Honky Tonk	Detune Depth		
7	Cold Upright Piano	Sound Character	-	-
8	Small Grand Piano	Lid Position		

E. GRAND

No.	Name	Bend lever	ASSIGN1	ASSIGN2
1	E.Grand Piano 1	Tremolo ON/OFF		
2	E.Grand Piano 2	Tremolo ON/OFF	-	-
3	M1 Piano	Mute	-	
4	Piano + Dyno	Piano ON/OFF	-	-
5	Romance Piano	Bell ON/OFF	-	
6	E.Grand + Piano	Effect Depth		
7	Layered Soft Piano	Sound Character	-	-
8	Choir Layered Piano	Sound Character		
9	Reverse Piano	Reverse Time		

KEY/LAYER

KEY

No.	Name	Bend lever	ASSIGN1	ASSIGN2
01	Clav AD	Pitch Bend	Mute (Decay)	Effect Depth
02	Clav AC	Pitch Bend	Mute (Decay)	Effect Depth
03	Clav BD	Pitch Bend	Mute (Decay)	Effect Depth
04	Clav BC	Pitch Bend	Mute (Decay)	Effect Depth
05	Clav Wah	Pitch Bend	Mute (Decay)	Effect Depth /Sound Character
06	Harpsichord Single	Pitch Bend	Key Off Level	Mute
07	Harpsichord Double	Pitch Bend	Key Off Level	Mute
80	Pipe Organ Positiv	Pitch Bend	Stop Variation	Effect Depth
09	Pipe Organ Mixtur	Pitch Bend	Stop Variation	Effect Depth
10	Pipe Organ Plenum	Pitch Bend	Stop Variation	Effect Depth
11	Pipe Organ Tutti	Pitch Bend	Stop Variation	Effect Depth
12	Accordion	Pitch Bend	Stop Variation 1	Stop Variation 2
13	Musette	Pitch Bend	Stop Variation 1	Stop Variation 2
14	Clav Chorus	Pitch Bend	Sound Character	Effect Depth
15	Clav Phaser	Pitch Bend	Sound Character	Effect Depth
16	Clav Duo EP	Pitch Bend	Key Off Level	Vibrato ON/OFF
17	German Harpsichord	Pitch Bend	Mute (Decay)	Feet Variation
18	Fortepiano	Pitch Bend	Lid Position	Sound Character
19	Toy Piano	Pitch Bend	Mute (Decay)	Key Off Level

BRASS

No.	Name	Bend lever	ASSIGN1	ASSIGN2
01	Bright Brass	Pitch Bend	Sound Character	Effect Depth
02	Trumpets Velo Shake	Pitch Bend	Sound Character	Effect Depth
03	Sfz Brass	Pitch Bend	Sound Character	Effect Depth
04	Funk Brass	Pitch Bend	Sound Character	Effect Depth
05	Brass Section	Pitch Bend	Sound Character	Effect Depth
06	Dynamic Brass	Pitch Bend	Sound Character	Effect Depth
07	Warm Brass	Pitch Bend	Sound Character	Effect Depth
80	Hard Attack Flute Vibrato	Pitch Bend	Staccato	Effect Depth
09	Tape Flutes	Pitch Bend	Tape Simulation	Sound Character
10	Trumpet Section	Pitch Bend	Sound Character 1	Sound Character 2
11	Trombone Section	Pitch Bend	Sound Character 1	Sound Character 2
12	Harmon Mute Trumpets	Pitch Bend	Sound Character 1	Sound Character 2
13	Fall/Glissup Trumpets	Pitch Bend	Sound Character	Fall / Gliss Up

STRINGS

No.	Name	Bend lever	ASSIGN1	ASSIGN2
01	Analog Strings	Pitch Bend	Sound Character 1	Sound Character 2
02	String Pad	Pitch Bend	Sound Character 1	Sound Character 2 (Effect Depth)
03	Legato Strings	Pitch Bend	Sound Character 1	Sound Character 2
04	Slow Strings	Pitch Bend	Sound Character 1	Sound Character 2
05	Small Pop Strings	Pitch Bend	Sound Character	Marcato
06	Arco Strings	Pitch Bend	Sound Character 1	Sound Character 2
07	Pizzicato	Pitch Bend	w/ Strings	only Strings
08	Tape Strings	Pitch Bend	Tape Simulation	Sound Character
09	Air Voices	Pitch Bend	Sound Character 1	Sound Character 2
10	Ooh Voices	Pitch Bend	Sound Character 1	Sound Character 2
11	Uhh Voices	Pitch Bend	Sound Character 1	Sound Character 2
12	Classical Choir	Pitch Bend	Sound Character 1	Sound Character 2
13	String Pad 2	Pitch Bend	Effect Depth	Sound Character
14	Analog Orchestra	Pitch Bend	Effect Depth	Octave Layer
15	Vintage Synth Strings	Pitch Bend	Octave Layer	Sound Character
16	Tape Strings 2	Pitch Bend	Tape Simulation	Sound Character
17	Humming Voices	Pitch Bend	Sound Character 1	Sound Character 2
18	Dream Voices	Pitch Bend	Portamento / Effect Depth	Sound Character
19	M/F Conversation	Pitch Bend	Marcato	Staccato

LEAD

No.	Name	Bend lever	ASSIGN1	ASSIGN2
01	Sine Lead	Pitch Bend	Portamento ON/OFF	Effect Depth
02	Espress Lead	Pitch Bend	Portamento ON/OFF	Sound Character
03	Deep Soul Lead	Pitch Bend	Portamento ON/OFF	Effect Depth
04	Saw Reso Lead	Pitch Bend	Portamento ON/OFF	Sound Character
05	Keen Lead	Pitch Bend	Portamento ON/OFF	Sound Character
06	Analog Lead	Pitch Bend	Sound Character	Effect Depth
07	Detuned Rock Lead	Pitch Bend	Portamento ON/OFF	Sound Character
08	Soft Distortion Lead	Pitch Bend	Portamento ON/OFF	Effect Depth
09	Rock Lead	Pitch Bend	Portamento ON/OFF	Sound Character
10	Sync Lead	Pitch Bend	Portamento ON/OFF	Sound Character
11	Square Lead	Pitch Bend	Portamento ON/OFF	Sound Character
12	Soft Square Lead	Pitch Bend	Portamento ON/OFF	Sound Character
13	Detuned Lead	Pitch Bend	Portamento ON/OFF	Sound Character / Effect Depth
14	E.Piano Lead	Pitch Bend	Effect Depth	Sound Character
15	Triangle Lead	Pitch Bend	5th Layer	Effect Depth
16	Pulse Lead	Pitch Bend	Sound Character	Effect Depth
17	Funky Lead	Pitch Bend	Octave Layer	Effect Depth
18	Scary Sprites Lead	Pitch Bend	Octave Layer	Effect Depth

SYNTH

No.	Name	Bend lever	ASSIGN1	ASSIGN2
01	Power Poly Synth 1	Pitch Bend	Portamento ON/OFF	Sound Character
02	Power Poly Synth 2	Pitch Bend	Sound Character 1	Sound Character 2
03	Bright Synth Brass	Pitch Bend	Sound Character 1	Sound Character 2
04	Warm Synth Brass	Pitch Bend	Portamento ON/OFF	Effect Depth
05	Sine Synth	Pitch Bend	Sound Character	Effect Depth
06	80's Octave Synth	Pitch Bend	Portamento ON/OFF	Sound Character
07	Detuned Stab	Pitch Bend	Sound Character 1	Sound Character 2 / Effect Depth
08	Square Pad	Pitch Bend	Sound Character 1	Sound Character 2
09	The Dawn Pad	Pitch Bend	Sound Character 1	Sound Character 2
10	Glitter String Pad	Pitch Bend	Portamento ON/OFF	Sound Character
11	Bright Sweep Pad	Pitch Bend	Sound Character 1	Sound Character 2
12	Naked Synth	Pitch Bend	LFO Modulation	Portamento ON/OFF
13	Chip Tune Synth	Pitch Bend	LFO Modulation	Sound Character
14	Solar Chimes	Pitch Bend	Sound Character 1	Sound Character 2
15	Resonance Pad	Pitch Bend	Sound Character	Effect Depth
16	Sine Pad	Pitch Bend	Sound Character	Effect Depth
17	Sax Pad	Pitch Bend	Sound Character	Effect Depth
18	Tripped Pad	Pitch Bend	Effect Depth	Octave Layer
19	Pump Pad	Pitch Bend	Pump Depth	Effect Depth
20	S&H Pad	Pitch Bend	LFO Modulation	Effect Depth

OTHER

_				
No.	Name	Bend lever	ASSIGN1	ASSIGN2
01	Marimba	Pitch Bend	Sound Character	Mute
02	Vibraphone	Pitch Bend	Tremolo Fast	Tremolo Slow
03	Glockenspiel	Pitch Bend	Sound Character 1	Sound Character 2
04	FM Tubular Bells	Pitch Bend	Sound Character	Effect Depth
05	Ensemble Bells	Pitch Bend	Sound Character	Effect Depth
06	FM Bells	Pitch Bend	Sound Character	Effect Depth
07	Bleep Bells	Pitch Bend	Sound Character	Effect Depth
08	Nylon Guitar	Pitch Bend	Mute	Effect Depth
09	Distortion Guitar	Pitch Bend	Tremolo	Effect Depth
10	Short Square Lead	Pitch Bend	Sound Character	Effect Depth
11	Impact Orchestra Hit	Pitch Bend	Sound Character	Effect Depth
12	Atmosphere Bells	Pitch Bend	Sound Character 1	Sound Character 2
13	Sine Pluck	Pitch Bend	Effect Depth	Octave Layer
14	Pluck Synth	Pitch Bend	1shot SFX	Effect Depth
15	Acoustic Bass	Pitch Bend	Mute	w/ Ride Cymbal
16	Finger Bass	Pitch Bend	Mute	Effect Depth
17	Pick Bass	Pitch Bend	Mute	Effect Depth
18	Fretless Bass	Pitch Bend	Sound Character	Effect Depth
19	Slap Bass	Pitch Bend	Mute	Effect Depth
20	Lucky Bass	Pitch Bend	Portamento ON/OFF	LFO Modulation
21	Booty Bass	Pitch Bend	Portamento ON/OFF	Effect Depth
22	Velocity Filter Bass	Pitch Bend	Portamento ON/OFF	Effect Depth
23	Organ Bass	Pitch Bend	Portamento ON/OFF	Effect Depth
24	Timpanic Bass	Pitch Bend	Sound Character	LFO Modulation
25	Steam Riser	Pitch Bend	Sound Character	LFO Modulation

SCENE

	Button		N	Dt	T	D
No.	BANK	SCENE	Name	Part	Туре	Bend lever
00	Α	1	VOX Organ Basic	ORGAN	VOX	Rotary Slow/Fast
01	Α	2	E.Piano MK II Tremolo	E.PIANO	TINE	Tremolo ON/OFF
02	Α	3	Grand Piano 1	PIANO	GRAND	Lid Position
03	Α	4	Clav AD Wah	KEY/LAYER	KEY	Pitch Bend
04	В	1	Rock Organ 4	ORGAN	CX-3	Rotary Slow/Fast
05	В	2	Reed EP 200 Tremolo	E.PIANO	REED	Tremolo ON/OFF
06	В	3	Upright Piano 1	PIANO	UPRIGHT	Lid Position
07	В	4	Detuned Stab	KEY/LAYER	SYNTH	Pitch Bend
08	C	1	Pipe Organ Plenum	KEY/LAYER	KEY	Pitch Bend
09	С	2	FM E.Piano 1	E.PIANO	FM	Tremolo ON/OFF
10	С	3	Piano + Strings	PIANO KEY/LAYER	GRAND STRINGS	Lid Position
11	С	4	Sfz Brass	KEY/LAYER	BRASS	Pitch Bend
12	D	1	Small Grand Piano	PIANO	UPRIGHT	Lid Position
13	D	2	German Harpsichord	KEY/LAYER	KEY	Pitch Bend
14	D	3	Fortepiano	KEY/LAYER	KEY	Pitch Bend
15	D	4	A.Bass & Piano Split	PIANO KEY/LAYER	GRAND OTHER	Lid Position

EFFECTS controls

EFFECT

No.	Type *1	EFFECT knob	EFFECT button + EFFECT knob	
01	CHORUS	Chorus Depth	LFO Frequency	
02	PHASER	Phaser Depth	LFO Frequency	
03	FLANGER	Flanger Depth	LFO Frequency	
04	COMP	Threshold & Gain	n Ratio	
05	DRIVE	Drive Depth	Mid EQ Fc Gain	
06	WAH	Envelope Sensitivity	Frequency	

^{*1} Press the EFFECT Type button to switch the type.

DELAY

No	. Type *2	DELAY knob	DELAY button + DELAY knob	
01	DELAY	Wet Level	Feedback Level	
02	CROSS	Wet Level	Feedback Level	
03	TAPE	Wet Level	Feedback Level	
04	MOD DLY	Wet Level	Feedback Level	

^{*2} Hold down the EXIT button and press the DELAY button. Press the KEY/LAYER ▲, ▼ buttons to switch the type.

REVERB

No.	Type *3	REVERB knob	REVERB button + REVERB knob	
01	HALL1	Wet Level	Reverb Time	
02	HALL2	Wet Level	Reverb Time	
03	ROOM1	Wet Level	Reverb Time	
04	ROOM2	Wet Level	Reverb Time	
05	SPRING	Wet Level	Reverb Time	

^{*3} Hold down the EXIT button and press the REVERB button. Press the KEY/LAYER ▲, ▼ buttons to switch the type.

Demo songs

	Button	5 04 : .: .			_
SCENE	Part	Song (Variation) name	Composer	Part	Туре
1	ORGAN	Radio Radio Organ 1	Mao Yamamoto	ORGAN	VOX
2	ORGAN	R&B Organ 2	Anthony Williams	ORGAN	CX-3
3	ORGAN	Distortion Organ	Dan Gabriel Stesco	ORGAN	CX-3
4	ORGAN	Gospel Organ	Jonathan Fashole-Luke	ORGAN	CX-3
1	E.PIANO	E.Piano MK II Tremolo	Jonathan Fashole-Luke	E.PIANO	TINE
2	E.PIANO	E.Piano MK I Tremolo	Mao Yamamoto	E.PIANO	TINE
3	E.PIANO	E.Piano MK I Amp	Anthony Williams	E.PIANO	TINE
4	E.PIANO	Dark FM E.Piano	Dan Gabriel Stesco	E.PIANO	FM
1	PIANO	Grand Piano 1	Anthony Williams	PIANO	GRAND
2	PIANO	Rock Octave Piano	Dan Gabriel Stesco	PIANO	GRAND
3	PIANO	Grand Piano 2	Jonathan Fashole-Luke	PIANO	GRAND
4	PIANO	Upright Piano Mono 2	Mao Yamamoto	PIANO	UPRIGHT
1	KEY/LAYER	Clav Wah	Anthony Williams	KEY/LAYER	KEY
2	KEY/LAYER	Rock Lead	Dan Gabriel Stesco	KEY/LAYER	LEAD
3	KEY/LAYER	Soft Distortion Lead	Mao Yamamoto	KEY/LAYER	LEAD
4	KEY/LAYER	The Dawn Pad	Jonathan Fashole-Luke	KEY/LAYER	SYNTH

Credit: All Rights Reserved.

For more information about Anthony Williams, visit http://www.korg.com/us/features/artists/2016/0210/

For more information about Dan Gabriel Stesco, visit http://www.danstesco.ro/

For more information about Jonathan Fashole-Luke, visit http://goldengroove.co.uk/act/jonathan-fashole-luke/

For more information about Mao Yamamoto, visit http://www.mao-official.com/

The copyright of all works belongs to KORG Inc. unless stated.



1 Harrison Close, Knowlhill, Milton Keynes, MK5 8PA. UK

www.voxamps.com